

Operating Specification

1. Set password + fingerprint

a-First, open the safe door without turning the knob. Remove the battery compartment cover and correctly insert the batteries (4 x 1.5 AA batteries) into the battery slots. (The batteries are inside the safe.)

b. When opening the door, press the red button behind it and scan your fingerprint. Keep your finger in place until the green light turns on. After completing the settings, tap the settings button and use the scanned fingerprint to unlock the door—the green light will then illuminate. At this point, turn the knob to the right or the handle to the left to open the cabinet door.

c-To change your password, press and hold the number 1 until the green light turns on, then enter 1234 followed by the setup button. Repeat this process once more to enter the 4-digit password, and your password will be set successfully.

2. Close the safe

Close the door, turn the knob counterclockwise, and lock the safe.

3. Replace the battery

The battery level is low. It's time to replace the battery. Ensure the battery is installed correctly. Perform a test.

Before you close the door.

Always use only alkaline batteries.

4. Install a safe

To reduce the risk of a safe being stolen, it can be secured to the floor, wall, or cabinet. For your convenience, the bottom and back of the safe feature four holes, allowing expansion bolts to be installed for secure fixation.

Warning:

a-Keep the master key to the safe in a secure location; do not store it inside the safe.

b-The supplier shall not replace or repair the item if the key is lost, the password is stored incorrectly, or the battery power is insufficient. c-If the battery is removed for an extended period, the password must be reset.

How to reset the password: Long-press the red button on the door hinge to restore factory settings. The password and fingerprint will then need to be reset.